



Important!

To assure product SAFETY and RELIABILITY, repairs, maintenance and adjustments should be performed by Black & Decker Service Centers or other qualified service organizations, always using Black & Decker replacement parts. Black & Decker's full two year home use warranty states that, in case of a defect, you may return the tool to the place of purchase for a free replacement (if it is a participating retailer) or you may take it to a Black & Decker Service Center.

Home Use Warranty (A Full Two Year Warranty)

 
Black & Decker (U.S.) Inc. warrants this product for two years against any defects that are due to faulty material or workmanship. Please return the complete unit, transportation prepaid, to the seller (if a participating retailer) for free replacement (proof of purchase may be required). The unit may also be returned to a Black & Decker Service Center or Authorized Service Station, listed under "Tools, Electric" in the yellow pages for free replacement or repair at our option. This warranty does not apply to accessories. This warranty gives you specific legal rights and you may have other rights which vary from state to state. Should you have any questions, contact your nearest Black & Decker Service Center Manager.

Like most Black & Decker tools, this tool is listed by Underwriters' Laboratories to ensure that it meets stringent safety requirements.

This symbol on the name plate means the product is listed by Underwriters' Laboratories, Inc.



See 'Tools-Electric'
—Yellow Pages—
for Service & Sales

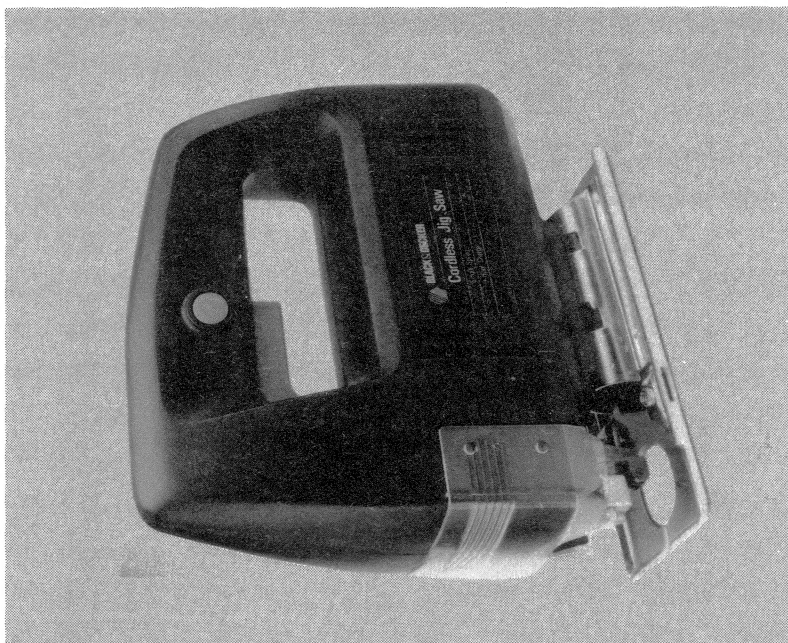

Instruction Manual

Cordless Jig Saw 9011


PART No. 830860

BLACK & DECKER

BLACK & DECKER (U.S.) INC., U.S. Power Tools Group, 10 North Park Drive, P.O. Box 798, Hunt Valley, MD 21030-0798 U.S.A.

Form No. 741385

 (Dec 87-2) ©1987 Printed in England

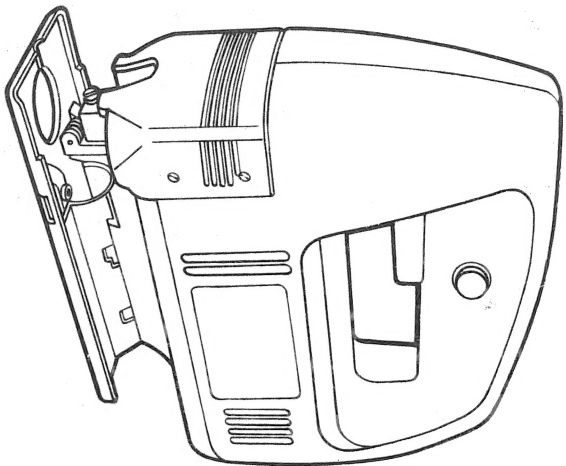

Thanks for buying a Black & Decker Cordless Jig Saw.

Your new CORDLESS JIG SAW is very versatile. It offers the ultimate in convenience and electrical safety. You can forget the electrical outlet, forget the cord and take your CORDLESS JIG SAW anywhere.

For safe and efficient operation of your new CORDLESS JIG SAW, please take the time to read all the safety rules

and operating instructions. Be aware that this is always in an operating condition, because it is battery powered and does not have to be plugged into an electrical outlet.

Don't forget to send in your owner's registration card.

Thanks again for buying Black & Decker.



Important Safety Instructions

WARNING: When using Cordless Tools, basic safety precautions should always be followed to reduce risk of fire, shock, and personal injury, including the following:

READ ALL INSTRUCTIONS

1. **KEEP WORK AREA CLEAN.** Cluttered areas and benches invite injuries.
2. **CONSIDER WORK AREA ENVIRONMENT.** Don't expose power tools to rain. Don't use power tools in damp or wet locations. Keep work area well lit.
3. **GUARD AGAINST ELECTRIC SHOCK.** Prevent body contact with grounded surfaces. For example: pipes, radiators, ranges, refrigerator enclosures.
4. **KEEP CHILDREN AWAY.** All visitors should be kept away from work area. Do not let visitors contact tool or extension cord.
5. **STORE IDLE TOOLS.** When not in use, tools should be stored in dry, and high or locked-up place—out of reach of children.
6. **DON'T FORCE TOOL.** It will do the job better and safer at the rate for which it was intended.
7. **USE RIGHT TOOL.** Don't force small tool or attachment to do the job of a heavy-duty tool. Don't use tool for purpose not intended, for example, don't use circular saw for cutting tree limbs or logs.
8. **DRESS PROPERLY.** Do not wear loose clothing or jewelry. They can be caught in moving parts. Rubber gloves and non-skid footwear are recommended when working outdoors. Wear protective hair covering to contain long hair.
9. **USE SAFETY GLASSES.** Also use face or dustmask if cutting operation is dusty.
10. **SECURE WORK.** Use clamps or a vise to hold work. It's safer than using your hand and it frees both hands to operate tool.
11. **DON'T OVERREACH.** Keep proper footing and balance at all times.
12. **MAINTAIN TOOLS WITH CARE.** Keep tools sharp and clean for better and safe performance. Follow instructions for lubricating and changing accessories. Keep handles dry, clean, and free from oil and grease.
13. **REMOVE ADJUSTING KEYS AND WRENCHES.** Form habit of checking to see that keys and adjusting wrenches are removed from tool before turning it on.
14. **AVOID UNINTENTIONAL STARTING.** Don't carry tool with finger on trigger.
15. **STAY ALERT.** Watch what you are doing. Use common sense. Do not operate tool when you are tired.
16. **CHECK DAMAGED PARTS.** Before further use of the tool, a guard or other part that is damaged should be carefully checked to determine that it will operate and perform its intended function. Check for alignment of moving parts, binding of moving parts, breakage of parts, mounting, and any other conditions that may affect its operation. A guard or other part that is damaged should be properly repaired or replaced by an authorized service center unless otherwise indicated elsewhere in this instruction manual. Have defective switches replaced by authorized service center. Do not use tool if switch does not turn it on and off.
17. **DO NOT OPERATE** tools near flammable liquids or in gaseous or explosive atmospheres. Motors in these tools normally spark, and the sparks might ignite fumes.

SAVE THESE INSTRUCTIONS FOR FUTURE USE

Important Charger & Jig Safety Instructions

THIS manual contains important information for the safe use of the Jig Saw. Read the instructions and cautionary statements on the battery charger and the Jig Saw.

The Jig Saw and Jig Saw charger are specifically designed to work together. DO NOT attempt to use any other cordless tool, charger, or other device with the Jig Saw. DO NOT attempt to use the Jig Saw with any other charger than the one recommended in this manual.

Do not expose charger to rain or

if an attachment not recommended or sold by the manufacturer may be used, the charger manufacturer may be held responsible for any injury or damage to the charger or to persons.

Do not use the Jig Saw to cut through materials that are not intended for use with the Jig Saw. This may cause damage to the Jig Saw and may result in injury to the user.

Do not use the Jig Saw in a confined space or near flammable materials. The Jig Saw may create sparks which could ignite flammable materials.

Do not use the Jig Saw to cut through materials that are not intended for use with the Jig Saw. This may cause damage to the Jig Saw and may result in injury to the user.

Do not use the Jig Saw to cut through materials that are not intended for use with the Jig Saw. This may cause damage to the Jig Saw and may result in injury to the user.

Table 1

RECOMMENDED MINIMUM AWG* SIZE FOR EXTENSION CORDS FOR BATTERY CHARGERS			
AC Input Rating Amperes**	AWG* Size of Cord	Length of Cord, Feet	
Equal to or greater than		25	50 100 150
1	2	18	18 16 14
2	3	18	18 16 14
3	4	18	18 16 14

 
*American Wire Gauge

**If the input rating of a charger is given in watts rather than in amperes, the corresponding ampere rating is to be determined by dividing the wattage rating by the voltage rating—for example:

$$\frac{1250 \text{ watts}}{125 \text{ volts}} = 10 \text{ amperes}$$

- Do not operate charger with damaged cord or plug — have them replaced immediately by a qualified service center.
- Do not operate charger if it has received a sharp blow, been dropped, or otherwise damaged in any way, take it to a qualified Black & Decker Service Center.
- Do not disassemble charger, take it to a qualified Black & Decker Service Center when service or repair is required. Incorrect reassembly may result in a risk of electrical shock or fire. There are no consumer serviceable parts inside.
- To reduce risk of electric shock, unplug charger from outlet before cleaning.
- NEVER attempt to connect 2 Chargers together.
- DO NOT store the Tool in locations where the temperature may reach or exceed 105°F (such as outside sheds or metal buildings in summer).
- DO NOT charge Jig Saw when it or air temperature is BELOW +40°F or ABOVE +90°F.

- DO NOT incinerate the Jig Saw even if it is severely damaged or is completely worn out. The batteries can explode in a fire. A small leakage of liquid from the battery cells may occur under extreme usage, charging or temperature conditions. This does not indicate a failure. However, if the outer seal is broken and this leakage gets on your skin—
 - Wash quickly with soap and water.
 - Neutralize with a mild acid such as lemon juice or vinegar.

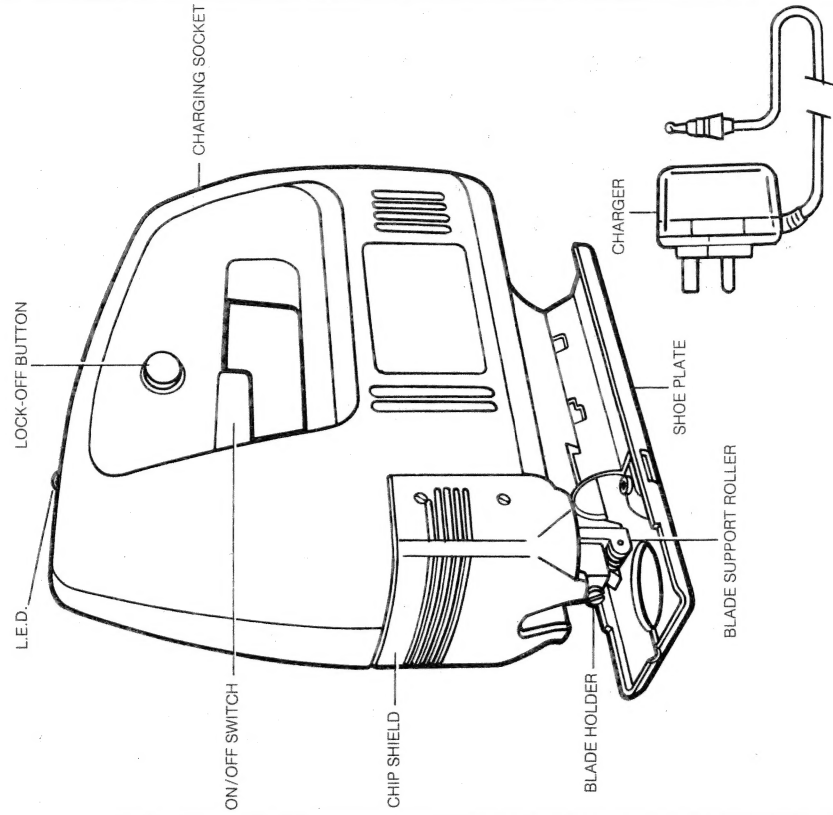

Important Charger Notes (Figure 2)

- To charge the batteries, locate the charging socket in rear of the Jig Saw (Figure 2) and plug the charger into a suitable socket. The LED will light, indicating the batteries are charging. Charge the batteries for 24 hours the first time or otherwise it will reduce its capacity to accept a full charge in the future.

- When you charge your Jig Saw for the first time, or after prolonged storage, it will only accept about an 80% charge. However, after several charge and discharge cycles, the batteries will come up to full capacity.

- Longest life and best performance can be obtained if the batteries are charged when the air temperature is about +75°F/25°C. DO NOT charge the batteries in an air temperature below +40°F/5°C or above +90°F. This is important and will prevent serious damage to the batteries.

- While charging, the Charger may hum and become warm to touch. This is a normal condition and does not indicate a problem.

 
- If the batteries do not charge properly - (1) Check the current at receptacle by plugging in a lamp or other appliance. (2) Check to see if receptacle is connected to a light switch which turns power off when the light is turned off. (3) Move Charger and Jig Saw to a surrounding air temperature of approximately 75°F. (4) If the receptacle and temperature are o.k., and you do not get proper charging, take or send the tool and charger to your local Black & Decker Service Center. See guarantee card.

- The Jig Saw should be recharged when it fails to produce sufficient power on jobs which were easily done previously. DO NOT CONTINUE to use under these conditions. Repeat the charging procedure.

- If stored without the charger plugged in the batteries may slowly self discharge. Normal charging will make the Jig Saw ready for use.

- After prolonged storage or repetitive use the batteries may appear to have reduced capacity. If this occurs adopt the following procedure:

- charge batteries normally
 - fully discharge the batteries (best done by using the Jig Saw until it no longer cuts easily and then hold the Jig Saw in mid air with the switch on until the motor stops).
 - charge for 24 hours - the batteries should now have full capacity.
9. The approximate charging time for the Cordless Jig Saw is 3 hours.

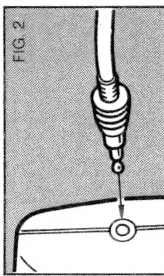

Attaching the Saw Blade (Figure 3)

Do not hold the Jig Saw by the switch when attaching blades.

To achieve a greater variety of applications this saw has a right angle blade clamp. This allows the teeth to face left or right from the normal direction. To attach this alternative clamp, first remove the standard clamp by removing the two screws marked (A) and then attach the right-angle clamp (J) ensuring that the identification rib is pointing towards the top of the unit. The blade can now be inserted into its location and the clamp fully tightened.

NOTE: When using this alternative clamp, the blade support roller must be adjusted away from the blade. Loosen the slot headed screw on the side of the saw (C) (Figure 4), adjust the roller back as far as it will go and retighten the screw.

